

Cockpit positions	LF - Left Fore	CL - Center Left	RF - Right Fore
	LM - Left Middle	C - Center	RM - Right Middle
	LA - Left Aft	CR - Center Right	RA - Right Aft

BEFORE START

Parking Brake (RA)	SET
A/A / CHARGES switch (CL)	As req.
V/UHF (Green) Radio (LF)	FF (ON) & Tuned
UHF (Red) Radio (LF)	M (ON) & Tuned
Engine shutdown button (LM)	PRESS
Bingo (CR)	SET
BATT switch (CR)	M (ON)
AV SON switch (RF)	ON (FWD)
PANNE button (Master Caution, CL)	RESET
E.P. switch (Emergency hydraulic Pump, RF)	ON (FWD)
Interior Lights (RA)	As des.
ANTI COLL. Lights switch (LF)	FORT (High)

ENGINE START

VENT switch (RA)	As des.
COUPE FEU (Fuel Shut-Off Valve, RA)	OPEN & GUARDED
G&D POMPES BP switches (L&R low-pres. pumps, RA)	M (ON)
POMPE DEM switch (Starter Fuel Pump, RA)	ON
Starter button (RA)	UNCOVER & PRESS
At 10% RPM Throttle	Advance to IDLE
DETOT (Total Fuel Qty, CR)	SET

POST-START

UNI (INS)	ALIGN
PSM Mode Selector knob (RM)	VEI
UNI Mode Selector knob (RM)	N
UNI PREP button (RF)	PRESS
Waypoint 00 (Keypad)	SELECT
Current Lat/Long coordinates & Altitude (RF)	CHECK
PSM Mode Selector knob (RM)	ALCM
UNI VAL button (RF)	PRESS
UNI Mode Selector knob (RM)	STS
Alignment Status (RF)	MONITOR 100 > 0
Alignment done UNI Mode Selector knob (RM)	N
Alignment done PSM Mode Selector knob (RM)	NAV

VTH switch (HUD, C)	M (ON)
Radar Altimeter Power switch (C)	M (ON)
HUD Altimeter switch (C)	H (Height)
VTB switch (HDD, C)	M (ON)
Radar Power knob (LM)	P (Warm-Up)

Takeoff	Rotate	~120 kt	Landing	Initial Gear	300 kt
				Final	< 260 kt 13° AoA

POST-START (CONTINUED)

IFF Mode knob (RF)	SECT or FULL / As des.
EW Modes knob (LM)	VEI (Stand-By)
BR switch (Jammer, LM)	M (ON)
D.A. switch (RWR, LM)	M (ON)
D2M switch (IR Launch Detector, LM)	M (ON)
L.L. Mode switch (Flare Disp., LM)	S.A. (Semi-Auto) / As. des.
Countermeasure Program (LM)	As. des.
VOR/ILS (LM)	M (ON) & Tuned
TACAN (LM)	T/R & Tuned
Full Flight controls wipeout (Stick & Rudder)	PERFORM
P.A. TEST switch (Autopilot Test, LA)	Uncover & M (ON)
After Green Light P.A. TEST switch (LA)	A (OFF) & Covered
CDVE TEST switch (FBW Test, LA)	Uncover & C (Short Test)
After Green Light CDVE TEST switch (LA)	Covered
ANEMO switch (Pitot Heat, RF)	ON & Guarded
CAP SEC. switch (Stby ADI, RM)	M (ON)
Stand-By ADI (CL)	UNCAGE

TAXI

Canopy	CLOSE
FEUX NAV. & FEUX FORMAT. switches (Ext. Lights, LF)	As req.
Landing/Taxi Lights switch (LF)	ROUL. (Taxi)
GROUND CREW > WHEEL CHOCKS	REMOVE
Parking Brake (RA)	RELEASE
DIRAV (Nosewheel Steering, Stick)	ENGAGE

TAKEOFF

DIRAV (Nosewheel Steering, Stick)	DISENGAGE
Wheel Brakes	HOLD
Throttle	Advance to MIL
Wheel Brakes	RELEASE
Throttle	Advance to FULL
At ~120 kt	ROTATE (Keep inv. T on horizon = 13° AoA)

AFTER TAKEOFF

< 260 kt Gear	UP
Landing/Taxi Lights switch (LF)	A (OFF)
MIL Climb	A/A 460 kn 0.85M   A/G 440 kt 0.80M
MAX Climb	A/A 550 kn 0.90M   A/G 550 kt 0.90M
HSI Mode (CR)	NAV

VISUAL APPROACH & LANDING	
Armament .....	SAFE
Nav. Master Mode (Weapon Syst. CMD Switch AFT) .....	SELECT
APP Mode (PCA, CL) .....	SELECT
Seat Height .....	ADJUST
Landing/Taxi Lights switch (LF) .....	ATT (Landing)
Initial .....	1500 ft AGL   300 kt
<b>On Downwind</b>	
< 230 kt Gear .....	DOWN
<b>On Base &amp; Final</b>	
Speed .....	~14° AoA (Align FPM with chevrons & AoA brackets)
<b>On Final</b>	
FPM .....	On touchdown point
<b>On Roll-out</b>	
13° AoA Aerodynamic breaking .....	MAINTAIN
Speedbrakes .....	DEPLOY
< 110 kt AP Disconnect switch (LF) .....	PRESS
< 40 kt DIRAV (Nosewheel Steering, Stick) .....	ENGAGE
AFTER LANDING   RUNWAY VACATED	
Seat Height .....	ADJUST
Speedbrakes .....	RETRACT
Landing/Taxi Lights switch (LF) .....	ROUL. (Taxi)
IFF Mode knob (RF) .....	OFF
EW Modes knob (LM) .....	VEI (Stand-By)
BR / D.A. / D2M / L.L. switches(LM) .....	4x A (OFF)
VOR/ILS & TACAN (LM) .....	OFF
ANEMO switch (Pitot Heat, RF) .....	A (OFF)
AV SON switch (RF) .....	A (OFF)

SHUTDOWN	
Parking Brake (RA) .....	SET
VTH switch (HUD, C) .....	A (OFF)
Radar Altimeter Power switch (C) .....	A (OFF)
VTB switch (HDD, C) .....	A (OFF)
UNI Mode Selector knob (RM) .....	AR (OFF)
CAP SEC. switch (Stby ADI, RM) .....	A (OFF)
Engine shutdown button (LM) .....	PRESS
COUPE FEU (Fuel Shut-Off Valve, RA) .....	CLOSED
G&D POMPES BP switches (L&R low-pres. pumps, RA) ...	A (OFF)
POMPE DEM switch (Starter Fuel Pump, RA) .....	A (OFF)
Interior & Exterior Lights (RA & LF) .....	OFF
V/UHF (Green) Radio (LF) .....	0 (OFF)
UHF (Red) Radio (LF) .....	A (OFF)
BATT switch (CR) .....	A (OFF)
Canopy .....	OPEN
AIR REFUEL	
Armament .....	SAFE
Nav. Master Mode (Weapon Syst. CMD Switch AFT) .....	SELECT
Radar Power knob (LM) .....	SIL
Air Refueling switch (LM) .....	RVT.J (Day) ou RVT.N (Night)
<b>After refuel</b>	
Air Refueling switch (LM) .....	ARRET (OFF)
External lights (LM) .....	As req.
Radar Power knob (LM) .....	EM