

Cockpit positions	BP - Breakers	OH - Overhead	PE - Pedestal
	CL - Left Panel	C - Center Panel	CR - Right Panel
	COL - Collective	CY - Cyclic	

BEFORE START

Parking Brake (PE).....	SET
BATT switch (OH).....	ON
APU generator switch (OH)	ON
NO.1 & NO.2 generators switches (OH)	2x ON
Exterior & interior lights (OH)	As req.
APU switch (OH).....	ON

Wait for APU to start ans systems to power on

AHRU (PE)	MONITOR
AN/ARN-149 ADF Radio (PE)	ON & Tuned
AN/ARN-147 NAV Radio (PE).....	ON & Set
DAP Only Pylon Power Control Panel (PE)	As des.
AN/ARC-201 FM Radios (PE)	2x SQ ON & Tuned
Countermeasure Dispenser Mode (PE).....	As des.
DAP Only Door Gunner Power & Control Authority (PE) ...	As des.
AN/APR-39 RWR Power Selector (PE)	ON
Tail Wheel (PE)	LOCKED
AN/ASN-128 Mode (PE)	MGRS or LAT/LONG Press ENT 2x
AFCS AUTO CONTROL (PE)	ON
AFCS SAS1 / SAS2 / TRIM / BOOST (PE).....	4x ON
AFCS FPS (PE)	ON / As des.
AN/ARC-186 VHF Radio Mode Selector (PE).....	ON & Tuned
AN/ARC-164 UHF Radio Mode Selector (PE)	ON & Tuned
AN/AVS-7 HMD Power Selector (PE).....	As des.

ENGINE START

Engine 1 & 2 Fuel Selectors.....	DIR
AIR SOURCE switch (OH).....	APU
Engine 1 Starter button (OH)	PRESS & RELEASE
Engine 1 Power Control lever (OH)	Advance to IDLE
Engine 2 Starter button (OH)	PRESS & RELEASE
Engine 2 Power Control lever (OH)	Advance to IDLE
Engine RPM, Temp & Ng Speeds (C)	MONITOR

Once engine speeds stabilized

Engine 1 & 2 Power Control levers (OH).....	Advance to FLY
RPM 100% & TRQ stable (C)	CHECK
APU generator switch (OH)	OFF
APU CONTR switch (OH)	OFF

POST-START

Stabilator position (C)	CHECK ~35°
-------------------------------	------------

POST-START (CONTINUED)

Warnings/Cautions/Advisories panel (C)	Check No Cautions
Barometric Scale (C).....	As des.
Radar Altimeter LO & HI bugs (C)	As des.
Auxiliary Fuel Transfer Mode (C)	OFF/AUTO As req.

GROUND TAXI

Parking Brake (PE)	RELEASE
Tail Wheel (PE)	UNLOCKED
Torque	SET 30-40%

SHUTDOWN

Collective (COL)	DOWN
Cyclic (CY)	CENTER
Pedals	NEUTRAL
Parking Brake (PE).....	SET
Engine 1 & 2 Power Control levers (OH)	IDLE
Engine 1 & 2 Power Control levers (OH)	CUTOFF
Engine 1 & 2 Fuel Selectors.....	OFF
AN/AVS-7 HMD Power Selector (PE)	OFF
AN/ARC-164 UHF Radio Mode Selector (PE)	OFF
AN/ARC-186 VHF Radio Mode Selector (PE)	OFF
AFCS SAS1 / SAS2 / TRIM / FPS / BOOST (PE)	5x OFF
AFCS AUTO CONTROL (PE).....	OFF
AN/ASN-128 Mode (PE)	OFF
AN/APR-39 RWR Power Selector (PE)	OFF
DAP Only Door Gunner Power & Control Authority (PE)	OFF
Countermeasure Dispenser Mode (PE).....	OFF
AN/ARC-201 FM Radios (PE).....	OFF
DAP Only Pylon Systems & Pylon Power selectors (PE).....	OFF
AN/ARN-147 NAV Radio (PE).....	OFF
AN/ARN-149 ADF Radio (PE).....	OFF
Exterior & interior lights (OH).....	OFF
NO.1 & NO.2 generator switches (OH).....	2x OFF
BATT switch (OH)	OFF

M134 DOOR GUNS (DAP)

AMS Master Arm switch (C).....ARMED
Door Gunner Power & Ctrl Authority Power switch (PE)ON
L & R CTRL switches (PE)PILOT / GUNNER

FIXED GUNS (DAP)

AMS Master Arm switch (C).....ARMED
AMS Weapon selector (C).....GUN
Pylon Power Control Panel (C)ON & Pylons selected

ROCKETS (DAP)

AMS Master Arm switch (C).....ARMED
AMS Weapon selector (C).....RKT
AMS PAIR/SINGLE (C).....As des.
AMS RIPPLE/SINGLE (C)As des.
Pylon Power Control Panel (C)ON & Pylons selected

HELLFIRE (DAP)

AMS Master Arm switch (C).....ARMED
AMS Weapon selector (C)MSL
Pylon Power Control Panel (C)ON & Pylons selected

ATLAS (DAP)

AMS Master Arm switch (C).....ARMED
AMS Weapon selector (C)ATLAS (Seeker tone audible)

Maneuver until seeker tone pitch increases

First DetentPRESS & HOLD (Missile uncaged)