

Cockpit positions	BP - Breakers	OH - Overhead	PE - Pedestal
	CL - Left Panel	C - Center Panel	CR - Right Panel
	COL - Collective	CY - Cyclic	

BEFORE START

ESNTL BUS switch (OH)	START
FADEC switch (OH)	ON
IGN switch (OH)	ON
Ignition key (PE)	ON
BATT 1 (OH)	ON
FADEC Auto/Manual switch (C)	CHECK AUTO
Exterior & interior lights	As req.

ENGINE START

Throttle (COL)	Advance to IDLE
START switch (COL)	HOLD 2"
Once NG stabilized ~63-65%	
DC GEN switch (OH)	ON
AC GEN switch (OH)	ON
ESNTL BUS switch (OH)	RUN
FUEL BOOST switch (OH)	ON
Particle Separator breaker (BP)	IN
Throttle (COL)	Advance to OPEN
MPD Selector switch (C)	Set to NR/NP
Set NR/NP (RPM Trim switch, COL)	100%
MPD Selector switch (C)	Set to FUEL QTY/ENG TRQ

POST-START

SCAS Power switch (C)	PWR
SCAS Yaw switch (C)	ENGAGE
SCAS Pitch/Roll switch (C)	ENGAGE
Pilot MFD (CR)	Set to VSD Page
IFF breaker (BP)	ON
Radar Detector breaker (BP)	ON / As des.
Radar Warning breaker (BP)	ON / As des.
L2MUM breaker (BP)	ON / As des.
CMWS switch (OH)	ON / As des.
CMWS Arm/Safe switch (PE)	ARM / As des.
CMWS Auto/Bypass switch (PE)	As des.
CMWS Control Indicator (C)	ON / As des.
Copilot MFD (CL)	Set to MMS Page
MMS Mode selector (CL)	FWD
MMS MAN/SLAVE button (CY)	MANUAL then SLAVED
Laser codes (Copilot MFD)	SET
MMS Laser switch (CL)	As des.

POST-START (CONTINUED)

MASTER ARM switch (C)	STBY
Radios	SET
Navigation	SET

SHUTDOWN

Collective (COL)	DOWN
Cyclic (CY)	CENTER
Pedals	NEUTRAL
Force Trim (CY)	ENGAGE
MMS Mode selector (CL)	OFF
Throttle (COL)	Set to IDLE (2")
AC GEN switch (OH)	OFF
FUEL BOOST switch (OH)	OFF
IFF breaker (BP)	OFF
Radar Detector breaker (BP)	OFF
Radar Warning breaker (BP)	OFF
L2MUM breaker (BP)	OFF
CMWS Control Indicator (C)	OFF
SCAS Power switch (C)	OFF
Throttle (COL)	CLOSE

Once NG < 10%	
ESNTL BUS switch (OH)	START
FADEC switch (OH)	FADEC
Particle Separator breaker (BP)	OUT

When rotor blades stop	
BATT 1 (OH)	OFF
Ignition key (PE)	OFF

M2P MACHINEGUN

MASTER ARM switch (C).....ARM

GUN ARM switch (C) .....RECOCK then ARMED

Cyclic (CY) .....Weapon Select UP

Cyclic (CY) .....Weapon Select LEFT or RIGHT as req.

HELLFIRE

MASTER ARM switch (C).....ARM

Cyclic (CY) .....Weapon Select UP

Cyclic (CY) .....Weapon Select LEFT or RIGHT as req.

Delivery Mode (Pilot MFD) .....LOBL/DIR

Launch Mode (Pilot MFD) .....MAN/NORM

Hellfire Status (Pilot MFD) .....CHECK RDY

Hellfire Laser Code (Pilot MFD) .....SET

Pilot MFD (CR) .....VIDEO ON

Copilot MFD (CL).....Set to MMS Page

MMS Mode selector (CL) .....FWD

MMS MAN/SLAVE button (CY) .....MANUAL

Target.....ACQUIRE

Area Track / Point Track

Laser button (CY) .....HOLD

Hellfire Status (Pilot MFD).....CHECK TRK

Weapon.....RELEASE

UNGUIDED ROCKETS

MASTER ARM switch (C).....ARM

Cyclic (CY) .....Weapon Select UP

Cyclic (CY) .....Weapon Select LEFT or RIGHT as req.

Mode (Pilot MFD) .....SINGLES / PAIRS / RIPPLE

APKWS ROCKETS

MASTER ARM switch (C).....ARM

Cyclic (CY) .....Weapon Select UP

Rocket Type (Pilot MFD).....SET

Zones A/B (Pilot MFD) .....SET

Fuze/Cue (Pilot MFD) .....SET

Range Source (Pilot MFD).....L/N/MAN RNG

Cyclic (CY) .....Weapon Select LEFT or RIGHT as req.

Pilot MFD (CR) .....VIDEO ON

Copilot MFD (CL).....Set to MMS Page

MMS Mode selector (CL) .....FWD

MMS MAN/SLAVE button (CY) .....MANUAL

Target.....ACQUIRE

Area Track / Point Track

Laser button (CY) .....HOLD

Hellfire Status (Pilot MFD).....CHECK TRK

Weapon.....RELEASE