

Cockpit positions	BP - Breakers	OH - Overhead	PE - Pedestal
	CL - Left Panel	C - Center Panel	CR - Right Panel
	COL - Collective	CY - Cyclic	

BEFORE START

DOME LT switch (OH)	As des.
EXT LTS switch (OH)	As req.
ANTI COLL switch (OH)	ON
AC POWER knob (OH)	AC PHASE
INVTR switch (OH)	CHECK OFF
MAIN GEN switch (OH)	ON
VM knob (OH)	ESS BUS
NON-ESS BUS switch (OH)	ON
STARTER GEN switch (OH)	START
BAT switch (OH)	ON
LOW RPM switch (PE)	OFF
MASTER CAUTION button (C)	RESET
GOV switch (PE)	AUTO
FUEL switch (PE)	ON
FORCE TRIM switch (PE)	ON
HYD CONT switch (PE)	ON
CHIP DET switch (PE)	BOTH
Altimeter (CR)	SET
Doors	CLOSED

ENGINE START

Throttle (COL)	Advance to FULL then IDLE-START
START switch (COL)	HOLD

Once N1 ≥ 40% RPM

START switch (COL)	RELEASE
--------------------	---------

Once N1 ~70% RPM

Throttle (COL)	Advance to FULL
INVTR switch (OH)	MAIN ON
STARTER GEN switch (OH)	STBY GEN

POST-START

RADAR ALT switch (CB)	ON
PITOT switch (OH)	As req. (ON ≤ 0°C)
Radar Altimeter (CR)	SET
Radio Compass (CR)	SET
LOW RPM switch (PE)	AUDIO
ARMAMENT switch (PE)	ARMED
FLARE/CHAFF switch (PE)	ARM
NAV Radio (PE)	PWR & TUNED
VHF Radio (PE)	PWR & TUNED

POST-START (CONTINUED)

UHF Radio (PE)	T/R+G & TUNED
FM Radio (PE)	T/R & TUNED
IFF Master knob (PE)	NORM
Gunsight	ON / As req.

SHUTDOWN

Throttle (COL)	IDLE
RADAR ALT switch (CB)	OFF
PITOT switch (OH)	OFF
IFF Master knob (PE)	OFF
ARMAMENT switch (PE)	OFF
FLARE/CHAFF switch (PE)	SAFE
NAV Radio (PE)	OFF
VHF Radio (PE)	OFF
UHF Radio (PE)	OFF
FM Radio (PE)	OFF
FUEL switch (PE)	OFF
FORCE TRIM switch (PE)	OFF
HYD CONT switch (PE)	OFF
EXT LTS switch (OH)	OFF

When rotor blades stop

ANTI COLL switch (OH)	OFF
INVTR switch (OH)	OFF
MAIN GEN switch (OH)	OFF
BAT switch (OH)	OFF

MINIGUNS

Gunsight Power switch	ON
Gunsight	UNSTOW
Gunsight elevation	SET
Weapon Selector switch (PE)	7.62 (7.62mm Guns)
Weapon Arming switch (PE)	ARMED

ROCKETS

Gunsight Power switch	ON
Gunsight	UNSTOW
Gunsight elevation	SET
Weapon Selector switch (PE)	2.75 (2.75inch Rockets)
Rocket Pair Selector switch (PE)	1 / As des.
Weapon Arming switch (PE)	ARMED